

PROSARIS

Quickstart Guide

OL1 Ultrasonic Leak Detector


PRO-TEC-DOC-U0001-R01



Package contents

- OL1 device
- USB-A charging cable
- USB-C connection cable
- Mounting plate
- Quickstart guide
- microUSB connection cable
- Soft carry case

Device layout

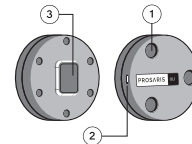

1. Microphone array
2. USB port
3. Magnet




Prevent any objects from coming in contact with the protective array covers

Initial setup

1. Charge the OL1

Your OL1 must be fully charged before first use. Let the OL1 charge uninterrupted for at least 8 hours.

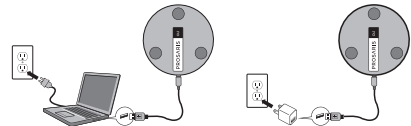

2. Download the app

To connect your OL1 to your Android tablet or smartphone, scan the QR code or search for Prosaris Leak Management in the Google Play Store.



3. Affix the mounting plate

To attach the OL1 to your tablet or smartphone, you must first affix the metal mounting plate.

Remove the backing and make sure the area is clean and dry. Depending on your device, the mounting plate may be oriented portrait or landscape. Ensure the center is at least 2.25 inches from the center of the device's camera. Let sit for at least 4 hours before attaching the OL1.

1



2




3




4. Attach the OL1

The OL1 attaches magnetically to the mounting plate. Ensure the Prosaris logo is parallel to the bottom of your device.

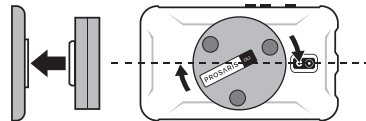

5. Connect the OL1

Using the included USB cable appropriate for your device, connect the cable to your device first, and then to the OL1.



Using the app

1. Log in

Launch the Prosaris Leak Management app and log in with the email and password provided to you. All further instruction will be provided by the app.



If you do not already have an account, tap Register to create one.

More information

This guide is just a first start. View the full user manual, including helpful tips and critical operating information, by going to help.prosaris.ca.